iVIEW®

iVIEW® — 706NB

USER'S MANUAL

7″ CyberNet

To assure the product to work in best status
please read the users manual carefully before operation
and keep it well for future use

iVIEW®

Enjoy life with Simplicity!

Thank you for purchasing iview products, for more information or to purchase new products, visit us on ***WWW.IVIEWUS.COM*** or call: ***(909) 627-9888.***

iVIEW-1030TPC
(10" 4:3 Tablet PC)

iVIEW-975TPC
(9.7" Tablet with Dual Core)

iVIEW-900TPCII
(9"Tablet PC)

iVIEW-795TPC
(7" Tablet with Dual Core)

iVIEW-792TPC
(7" Tablet with Phone)

iVIEW-760TPC
(7" Tablet with Leather Case)

iVIEW-754TPC
(7" Tablet PC)

iVIEW-500TPC
(5" Tablet with Phone)

Enjoy life with Simplicity!

iVIEW-1010 NB
(10" Netbook)

iVIEW-980PDVX
(9" Portable DVD)

iVIEW-368PTV
3.5" ATSC Portable TV

iVIEW-700TPC
7" ATSC Portable TV

iVIEW-1900LEDTV
19" LED TV

iVIEW-3000STB
Converter Box

iVIEW-HFR2-SU3
(eSata 4 Bay Enclosure)

iVIEW-1000KOD
Karaoke on Demand

Content

1.Outlook Description 2
2.Power Button Usage.. .3
3.U-Disk... 3
4.Using Micro-SD Card..4
5.Keyboard...5
6.Touchpad...6
7.Getting Started..6
   * Charge the device...6
   * Turn the device on..6
   * Wi-Fi Network Setup..6
   * HDMI video play...7
8.Desktop&Screen Lock..8
9.Pre-loaded Applications...9
10.Status And Notification Area..9
11.King Kong Apps Market...11
12.Application Management..12
    * Install Android Applications...12
    * Download Android Applications direct from a Website............13
    * Uninstalling Android Applications...13
13.Weather...13
14.Clock..14
15.Play store 15
    * Download Applications...15
    * App Market Function Menu..16
16.Browser..16
17.Calendar...17
18.Camera..17
19.Calculator..19
20.Myrecorder...19
21.Email...19
   * Add Email accounts...19
   * Email Inbox...20
   * Edit Email Accounts...21
   * Delete Email Accounts..21

22.File Browser..22
  * Connected to the local area network shared folders....................22
  * Delete files..23
23.My Music..24
  * Play Music..24
  * Create Music Widget..24
  * The Operation with Music and Playlist..25
  * Sort by title or date added..25
24.My Video..25
  * Play Video..26
  * Create Video Widget..26
  * The Operation with Video..26
  * The Operation with Playlist..26
25.My Photo..27
  * The operation with picture list..27
  * Slide show and settings..27
  * Doodle..28
  * Create Photo Widget..28
26.Gallery..28
27.Screen Capture..29
28.Task Manager..30
  * Stopping Applications..30
  * Uninstall Applications..30
  * Install Applications..30
29.WI-FI..30
30 Pppoe Settings..31
31 Ethernet..31
32 Settings 32
Frequently Asked Questions..36
Battery Management..37
Important Safety Precautions..38
Appendix 1 : The optional parts and models..39
Appendix 2： List of the default key function..40
Specifications..41

iView-706NB features many great functions for great companion for keeping up with your social network, office, and entertainment. It is lightweight with slim look for easy portability. You can access the internet wirelessly anywhere and browse the website, send your email and instant message, listen to music, play movies and apps. Embedded with **King Kong Apps Market** with thousands of useful and fun apps you can easily access and download the apps that tap your need.

1.Outlook Description

Front:

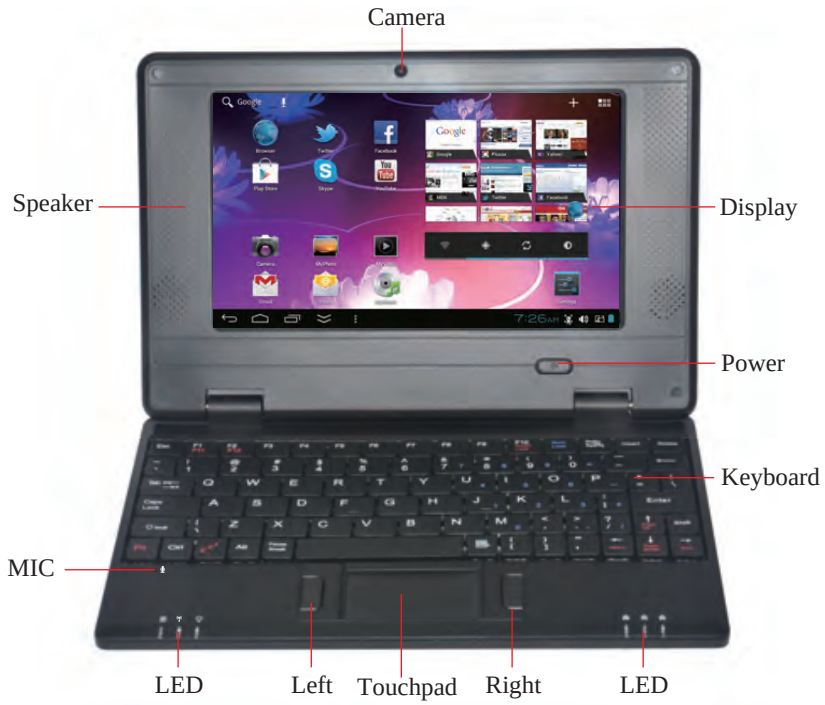
Camera
Speaker
Display
Power
Keyboard
MIC
LED
Left
Touchpad
Right
LED

Left side:

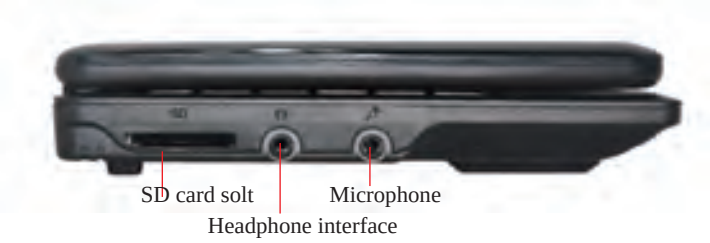
SD card solt
Microphone
Headphone interface

Right side:


USB
interface

Top:



2.Power Button Usage

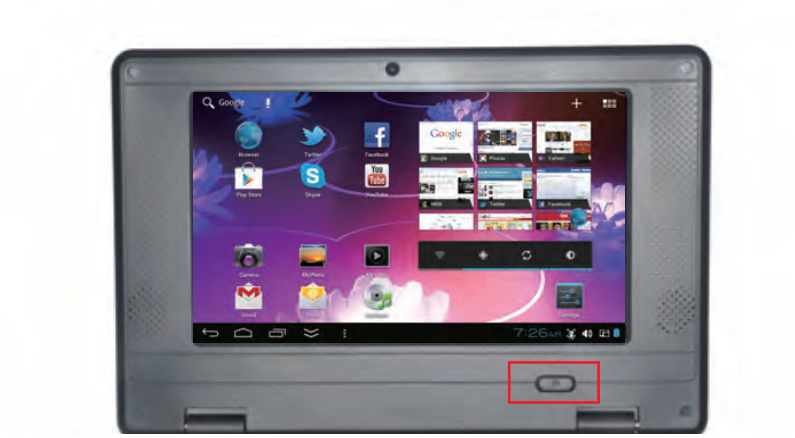

Turn On/ Off: Press the power button and hold for 2 seconds. Tap OK to power off.

Sleep Mode On/Off: Press & release the power button quickly to turn sleep mode on and off.

Reset Button: If device does not respond, press the reset button to reset the device. (**Note:** Current the reset function can not be restart, so after reset you need to press the power button to re-boot.)

Warning: Force off could lead to unpredictable system errors !

3.U-Disk

Insert U-Disk

Insert your U-disk into the device . When ready for use, enter into the file browser, switch to the USB folder to view it.

Remove U-Disk

Close all applications or documents which have been opened on the U-disk. Tap ▦ → **Settings** →**Storage** →**USB storage** → **Unmount this storage device**. When it displayed **Mount this device** and then you can unplug the U-disk.

☆ *Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the U-disk.*

4.Using Micro-SD Card

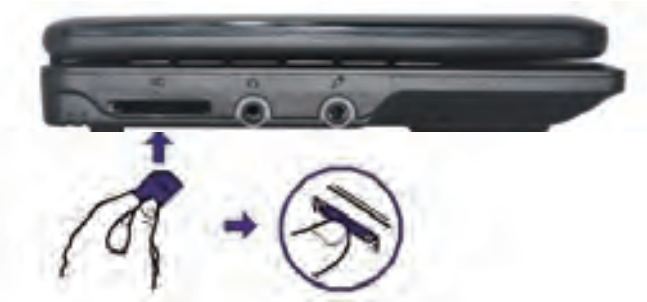

☆ *The device supports a maximum 32GB microSD card.*
Insert your card into the microSD slot until it clicks into place. It's OK.

Remove microSD Card

Close all applications or documents which have been opened on the card. Tap ▦ → **Settings** →**Storage** →**SD card** → **Unmount this storage device**. When it displayed **Mount this device** and then press the card lightly; it is partially ejected allowing you to pull the card out.

☆ *Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the card.*
☆ *We recommend using major brands of memory cards to avoid incompatibility.*

5.Keyboard

Wireless Book was used 80 keys of standard keyboard template.
There are some functions of key combination

		Home
		Sleep

Num keyboard

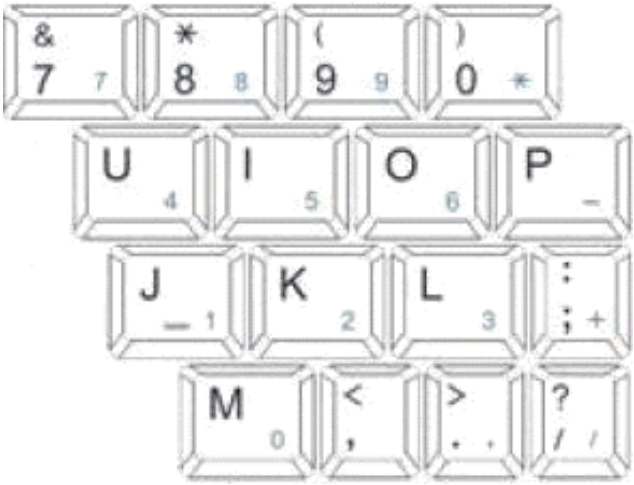
& 7 7
* 8 8
(9 9
) 0 *
U 4
I 5
O 6
P –
J 1
K 2
L 3
: ; +
M 0
< ,
> . .
? / /

Users press  to change Num mode and then they can input the corresponding number by Num key. Press it again to get back normal mode.

Commonly used buttons:

Esc: Back
Enter: OK
F1: Browser
F2: My Music
F3: My Video
F4: My Photo

F5: Calculator
F6: WmtWeather
F7: Brightness+
F8: Brightness-
F9: Calendar
F10: File Browser

6.Touchpad

Touchpad is a mouse device it can be used as a regular mouse. Touch pad buttons on both sides of the left and right mouse buttons and common features with the same.

Note:

Do not place heavy objects on the touchpad to avoid being scratched or deformed

7.Getting Started

Charge the device

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours in the off status).

Turn the device on

Press and hold the power button 2 seconds.

Wi-Fi Network Setup

Since many features require a Wi-Fi connection, we recommend you set up your Wi-Fi network now.

1. Tap ▦ → **Settings**.
2. Slide **Wi-Fi** switch to turn on.

The device automatically scans and lists all local Wi-Fi Network found. A lock indicates secure **Wi-Fi** networks that require input password to connect.

3. Tap the desired network to which you want to connect → enter the **Network Password** if applicable → tap **Connect**.

4. Tap ⌂ to return to the Desktop screen.

☆ *If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap **Add Wi-Fi network** and follow the prompts to add your network.*

HDMI video play

This device support through the Mini HDMI connected with TV, it makes TV and device displayed synchronic. For using this feature, insert the Mini HDMI cable into the right side of the device interface to connect with TV.

TV screen adjustment

After connecting HDMI, Enter into Settings → Display → TV screen adjustment, By adjusting the drag strips in the interface to change the width and height of the TV side.

☆ *After connecting HDMI, you can press the power button to turn off the screen, In order to get longer battery life.*

8.Desktop & Screen Lock

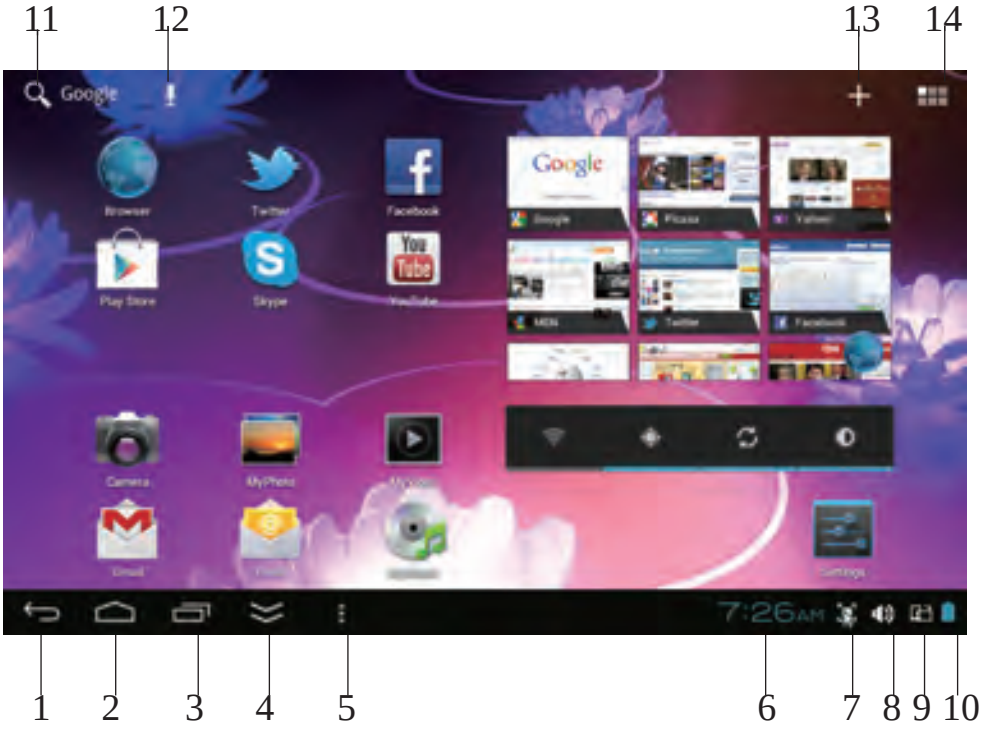
11
12
13
14
Google
Browser
Twitter
Facebook
Play Store
Skype
YouTube
Google
Picasa
Yahoo!
MSN
Twitter
Facebook
Camera
MyPhoto
Gmail
Email
Settings
7:26AM
1
2
3
4
5
6
7
8
9
10

1. Back.	8.Volume.
2. Home.	9. rotating.
3. Recent Apps.	10. Battery Status.
4. Hide status bar.	11. Google search.
5. Menu.	12. Voice search.
6.Current time.	13. Add Widgets/Apps shortcuts or setting wallpapers and more.
7. Screen capture.	14. Tap to view the applications screen

Through add icon + can make many personalized operation, such as, add widgets, application shortcuts, set wallpaper, add bookmarks, email accounts and set up the shortcut.

☆ *Tap on any application icon to launch it.*
☆ *Touch, hold and then slide icons to reposition then on the screen.*

☆ *Touch, hold and slide icons onto* ✕ *to remove them from the* **Desktop** *screen.*

Can be set to automatically lock screen or quickly press the power button to manually lock screen. The system provides four lock screen style for users. You can enter Settings → Security →Lock Screen to switch.

Lock screen displays the following:

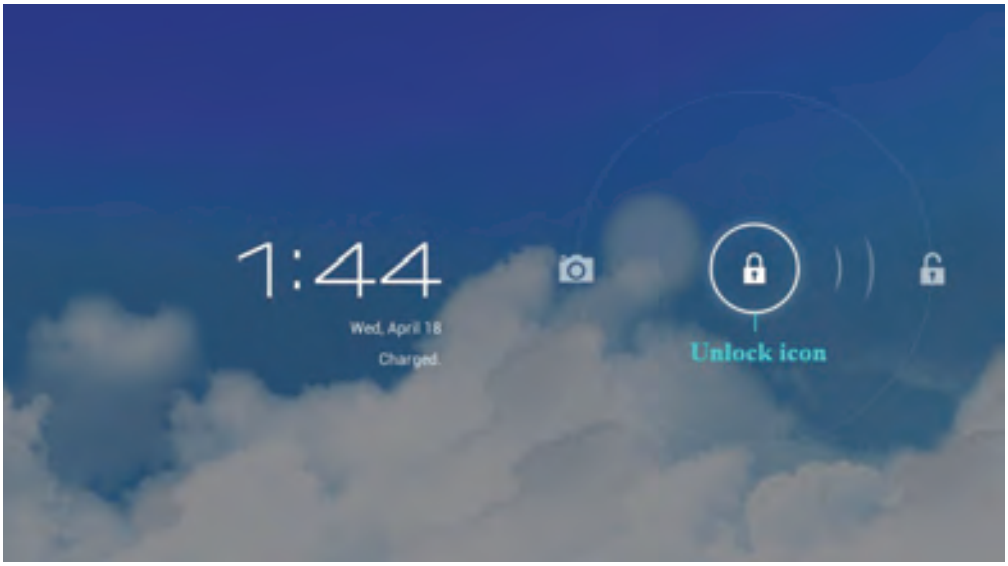

Tap the unlock icon and drop it to the right and out of the circle to unlock.

9.Pre-loaded Applications

	Weather	Set up the degree of temperature, weather auto-refresh rate, add city and view the city's weather.
	Clock	It can display the time and set the alarm.
	Play store	Downloaded applications quickly & easily.
	Browser	Access internet.
	Calendar	Calendar.

	Camera	Take normal photos, panoramic photos and take video.
	Calculator	Do calculation.
	Email	Send/Receive email using your existing email addresses.
	File Browser	File manager application for viewing and managing files and apps. Use to install Android apps, and to backup files to your SD card.
	My Music	Play and manage audio files.
	My Video	Play and manage video files.
	My Photo	View and manage photo files.
	Gallery	Play, view, and manage video and photo files.
	Picture Capture	Capture image of the screen.
	Task Manager	Application manager for managing processes.
	My Recorder	Recording function
	Flash player settings	Flash player settings.
	Downloads	View the downloads and the download progress.
	Search	Local search and online search.
	Settings	Multiple settings for personalizing and enhancing your Device.

☆ *To move an icon to the Desktop screen, touch & hold the icon, and then release it when it appears on the Desktop screen, or click + icon ,Then click on the icon which you want to add to desktop in the App shortcuts below this interface, the icon will automatically move to the desktop.*

☆ *Touch, hold and then slide icons to reposition then on the screen.*

☆ *Touch, hold and slide icons onto ✕ to remove them from the Desktop screen.*

10.Status And Notification Area

On the Desktop screen, click the icons which in the state bar to view more state information and events.

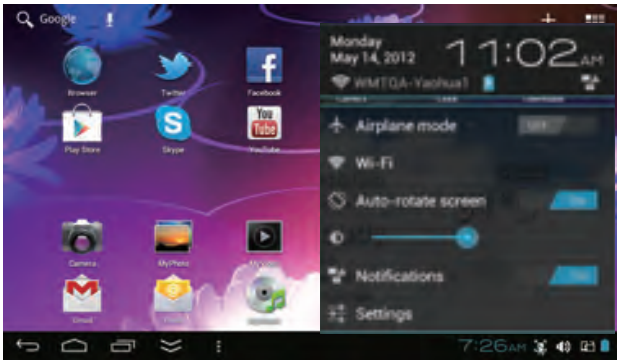
Google
Browser
Twitter
Facebook
Play Store
Skype
YouTube
Camera
MyPhoto
Gmail
Monday
May 14, 2012
11:02 AM
Airplane mode
Wi-Fi
Auto-rotate screen
Notifications
Settings
7:26 AM

Airplane mode	Switch airplane mode.
Wi-Fi	Access to Wi-Fi settings interface.
Brightness	Setting screen brightness.
Notifications	Open or close the notification.
Settings	Access to settings.

11. King Kong Apps Market

The King Kong Market is a showcase for some of the featured and top ranked applications and games available. For a comprehensive, up-to-date list of the tens of thousands of titles available, check out other application markets.

1. Click the King Kong Market icon from the desktop.
2. Choose from the list of applications .
3. Check whether the program need to be paid or not, then click”compatibility”to check compatbility.
4. Click “Install” if the programme is compatible with the device and if it’s free.
5. Register the needed information for must-be-paid programme.

6. Click “Install” to download programme after you paid for it.
7. Wait for the prompt “Do you want to install this application?”
8. Click “Install” and “Done/Open” when screen prompts “Application installed”.
9. Press [ESC] to go back and/or exit.

Note:

1. Applications can’t be downloaded unless it’s compatible with the device or system software.
2. When you get to the crash report dialog and press cancel, Apps menus will still work. You can use them to navigate. Even pressing ESC can restore the previous working screen. Worst case scenario would be to go to settings and force stop the application, relaunching will work,
3. Above operation must be under connected internet .

12.Application Management

Install Android Applications

☆ *There are many interesting and free Android applications that can be found on the web. Such as launch your web browser and do a search for “Android applications”.*

Purchased or free Android applications that you have downloaded to your computer can be installed quickly & easily on your Tablet using the File Browser or task manager application.

1. Copy the **.apk** files that you want to install onto a SD card or USB device → insert or connect to your Device.
2. Tap the **File Browser** application icon.
3. Tap SD or USB and locate the folder in which the **.apk** application files were saved.
4. Tap on a **.apk** file → **Install**.

5. The application is installed and the application icon is added to the **Applications** screen.
6. Tap Open to launch the application now, or tap **Done** to return to the **File Browser** screen.

Download Android Applications direct from a Website

You can download Android applications directly from websites, and then quickly and easily install them on your device.

1. Tap the 🌐 **browser** application icon to launch the internet.
2. Enter the desired website URL, and tap the **download** link for the application you want to install on your device.
3. After the download is completed, tap ▦ →**Downloads**. Open the applications from app list.

Uninstalling Android Applications

You can also quickly and easily uninstall the Android applications that you have installed.

1. Tap ▦ → Settings → Apps → All.
2. Tap the application you want to uninstall → Uninstall.
3. Tap OK to confirm the Uninstall.

13.Weather

Tap the ⛅ Weather application icon.

General setting

You can set Temperature Unit(℃), Update frequency .

About

View software version number and relevant legal information.

Add city

You can add city to Weather and view the city’s weather information.

Select city

In the list of cities, click the city to view the weather information. After selected the city, tap **delete** the city, tap **refresh** the weather information.

You can make the weather displayed on the **Desktop** through adding widget. The way is: tap + → **Widgets** → **Weather Widget**.

14.Clock

Tap the Clock application icon. You can see the time and date.

Alarm

You can use your device as an alarm clock by setting multiple alarms.

Add Alarm

1. Tap the **Clock** application icon.
2. Tap **Set alarm** → **Add alarm**.
3. Set up your alarm as desired.
4. Tap **OK.**
5. Selected the alarm clock.

Shut Off Alarm Alert

When a scheduled alarm is activated, a pop-up window with the alarm title appears.

Tap **Snooze** if you want to be reminded again in 10 minutes.
Tap **Dismiss** to cancel the alert.

Turn Alarm on

1. In the Alarm list, find the desire alarm.
2. Click the ☐ on the left.
3. After the ☐ change to ☑ , tap **Done**.

Edit Alarm

1. Tap the **Clock** application icon →**Click**
2. Tap on the alarm you want to edit → make desired edits.
3. After editing, tap **OK**.

Delete Alarm

1. Tap the Clock application icon →**Click**
2. Tap on the alarm you want to delete.
3. Tap **Delete** →**OK**.

Tap to return to the Desktop screen.

15 play store

The google paly store has many applications that you can quickly and easily download to your Tablet.

Download Applications

1. Tap the paly store application icon.
   ☆ *The first time, it will prompt "**Register**" and "**Login**" options. If you have not yet registered an google account, tap **Register**. Otherwise, tap **Login** and enter your login information and then tap **Login** again.*

2. You can select applications from the default **Featured** group, by **Categories**, **Top** (latest, hottest, random), or search by name.
3. Tap on an application → **Download**.
4. After the app is downloaded, tap **Install**.
5. Tap **Open** to launch now, or **Done** to return to the **paly store** screen.

16.Browser

Users can connect to the Internet through browser.

Click the browser icon on the Desktop , and then you can open the Web browser.

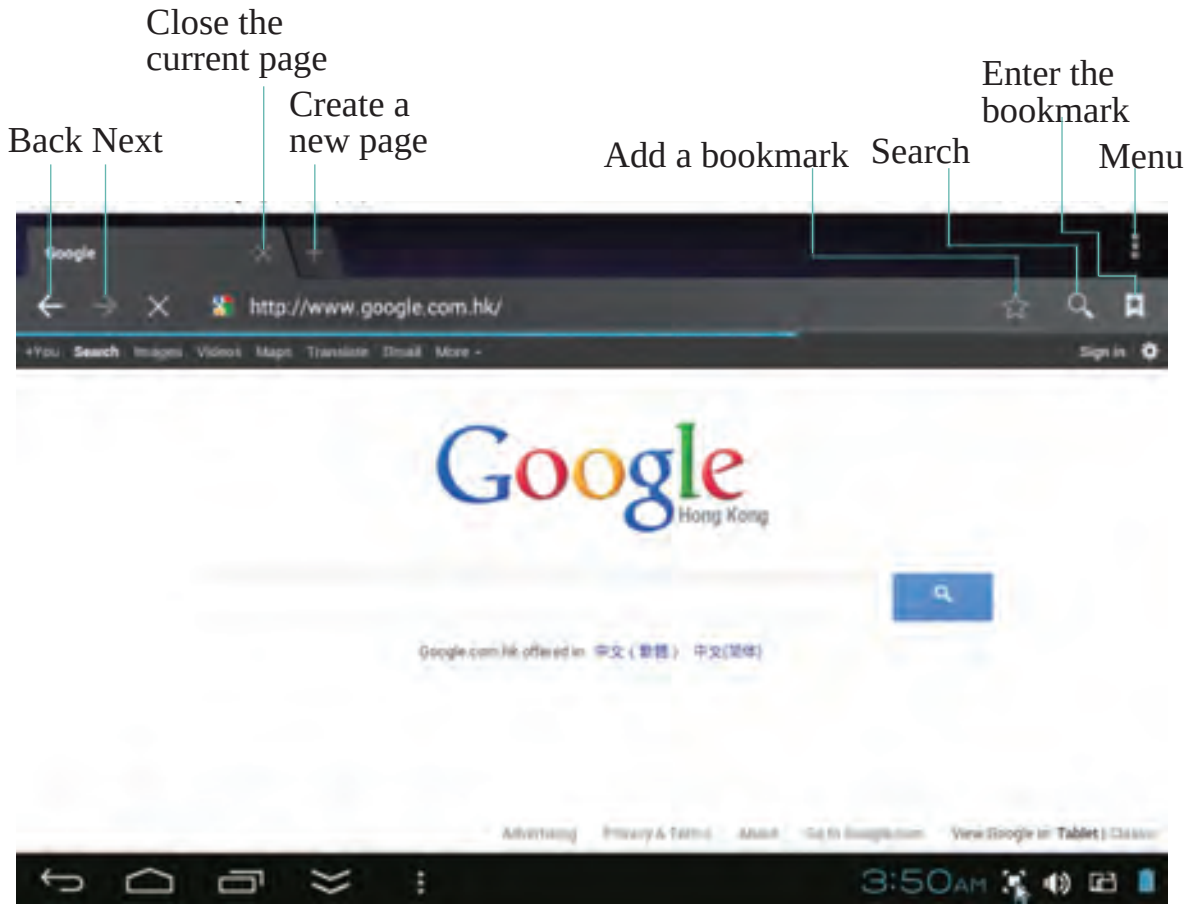
Close the current page
Back Next
Create a new page
Add a bookmark
Search
Enter the bookmark
Menu
Google
http://www.google.com.hk/
Google
Hong Kong
3:50AM

tap **delete** the city, tap **refresh** the weather information.

You can make the weather displayed on the **Desktop** through adding widget. The way is: tap → **Widgets** → **Weather Widget**.

17.Calendar

Tap the Calendar application icon.

For the first time using the Calendar, you need to add an Exchange account. Enter account email address and password. Enter the system Settings → Account & sync →Add account. According to the prompts complete the setting. After then you can use the calendar. Only to view the calendar need not to add Exchange account.

Add Event

1. On the Calendar screen, tap on the date to which you want to add an event.
2. Tap on the event time → tap
3. In each field, enter the details of the related activities.
4. Tap Done.

Click the date time in the upper left to choose the calendar you want, such as DAY,WEEK，MONTH and AGENDA display mode.

☆ *Dates with gray bars indicate scheduled events.*

18.Camera

Tap the Calendar application icon.

Take Pictures

1. Tap 📷 switch to video, and you can take picture.
2. Tap ● take picture.
3. The picture will be saved.
4. Tap the picture thumbnail to enter My Photo to scan the picture.
5 Press Back to the Camera.
6 Tap ↩ to exit the Camera and back to the Desktop.

Take Videos

1. Tap ▭◀ switch to video, and you can take videos.
2. Tap ● to begin and tap ● to stop.
3. The video will be saved.
4. Tap the video thumbnail to play the video.
5 Press Back to the Camera.
6 Tap ↩ to exit the Camera and back to the Desktop.

Single-motion Panorama

For capturing larger scenes, tap ▭ icon and switch to single-motion panorama mode. In this mode, the user starts an exposure and then slowly turns the Camera to encompass as wide a perspective as needed. The Camera assembles the full range of continuous imagery into a single panoramic photo.

Note: You can tap ROM on the top left of the interface to choose the files are stored in the ROM, SD card or USB storage.

19.Calculator

1. Tap the Calculator application icon
2. Tap the numbers and sign of operation to do the calculation.
3. Tap **CLEAR** to clear the result one by one, tap and hold **CLEAR** to clear all.

20.Myrecorder

1. Tap the recorder icon.

2. Tap the record icon to start recording.

3. Tap the record icon to stop record.

4. Tap the play button to play the voice of recording.

21.Email

☆ *POP3, SMTP and Exchange accounts are supported.*

Add Email accounts

You can enter one or more personal email addresses that you would like to access through your Tablet.

1. Tap the **Email** application icon.
2. On the **Account setup** screen, Tap in the **Email address** entry field → enter your email address.
3. Tap in the Password entry field → enter your email password.
4 Tap **Next.**

5. Manual Setup (optional): The server settings are automatically populated based on your email account provider (i.e., gmail.com, etc). However, if you need to change the server settings tap Manual Setup and make necessary changes.
6. According to the selected mailbox server, enter or select the parameter and server type, and then tap Next
7. Optional: Enter a name for the account.
8. Enter name for outgoing message → tap Done.

☆ *After setup, if you are unable to connect to a free email account, check with your email provider to make sure their servers support free accounts on Post Office Protocol (POP) or Simple Mail Transfer Protocol (SMTP).*

Email Inbox

1. Tap the **Email** application icon.
2. If you set up only one email account, it opens immediately. If you set up multiple accounts, they are listed in the **Accounts** screen.
3. Tap on the desired email account → tap **Inbox.**

Open Email Message

1. On the **Inbox** screen, tap on an email to open it.
2. For attachments, tap **Open** to launch appropriate application, or tap **Save** to save attachment to a SD card.
3. To replay, tap **Reply** or **Reply all.**
   a. Tap in the Compose Mail entry field to enter your reply message.
   b. Tap Send to send immediately, Save as draft to save without send or Discard to discard without saving or sending.
4. To delete the email immediately, tap **Delete**.

Compose New Email Message

1. On the Inbox screen, tap ✉ .
2. Enter the e-mail address in the recipient field. if you want to add Cc or Bcc recipients, tap ⋮ → Add Cc/Bcc, and then enter the recipient's email address.
3. Tap in the Subject entry field to enter your desired subject title.

4. Tap in the Compose Mail area to enter your personal message.

5. If desired, tap ⋮ → 📎 to attach a file.

6. When ready to send the email, tap ➤ SEND

Edit Email Accounts

1. Tap the ✉ **Email** application icon.

2. On the Inbox screen, tap ⋮ → settings.
3. Set your desired preferences to customize your email account.

4. Tap ↩ to return to the Inbox screen.

Delete Email Accounts

☆ *If you have multiple accounts, and you delete the account designated as the default account, the next email listed is automatically set as the default.*

1. Tap the ✉ Email application icon.

2. On the Inbox screen, tap ⋮ → Settings.
3. Click the account you want to delete.
4. In the pop-up Account options window, tap Delete
5. Tap OK to confirm the deletion.

Set Default Email Account

You must always have one account designated as the default account, so if you have multiple email accounts, you can select any one as the default.

1. Tap the ✉ Email application icon.

2. On the Inbox screen, tap ⋮ → Settings.
3. Tap the desire account.
4. In the right settings list, tap Default Account to select it.

If you delete the account that was designated as the default account, the next email listed is automatically designated as the default.

22.File Browser

Tap the 📁 File Browser application icon to view the files on all storage devices (Internal memory, SD card, USB device), and to quickly & easily install Android application on your Tablet.

Use the icons across the top of the screen as follows:

ROM	Internal Flash (ROM)
SD	SD Card
USB	USB Storage
📋	Paste
⮤	Back to the previous folder
⊞	Switch folder display mode.
⋮	Menu

Copy Media between Computer and Tablet

You can use the File Browser to copy files between an external storage devices and your computer. You can first copy the desired files onto a SD card or USB device.

☆ *The internal device storage is titled “ROM”, a memory card “SD”, and a USB storage device is titled “USB”.*

☆ *The instructions below are for copying from a SD card or USB storage device into the device. You can use the same method to copy from the device to a SD card or USB storage device, and then connect the storage device to your computer to transfer the files into the desired folder on your computer.*

1. Tap GoTo, selector SD or USB to display the contents of your storage device.
2. Tap and hold a folder/file and enter into the multi-select mode, select the folder/file as desire → tap Copy.
3. Tap GoTo, select ROM Internal Memory → tap on the folder into which you want to copy the file → tap 📋 .

Connected to the local area network shared folders

You can view all of the LAN shared folders.

1. Connect to LAN.
2. Tap ⋮ **Net share →Add new sharing point →Choose the mode used of sharing → Editor of network folder sharing.**
3. After connect successes.Enter **network sharing settings** and open the list of shared folder directly.

Delete files

Tap and hold a folder/file and enter into the multi-select mode, select the folder/file as desire → tap **Delete** → **OK** to confirm the deletion. → tap **Delete** → Tap **OK** to confirm the deletion.

23.My Music

☆ *Audio file formats supported: MP2, MP3, WAV, AAC, WMA.*

Play Music

1. Tap the My Music application icon.
2. Select an audio file from All/Albums/Artists/Directories/My Favorites/User Defined Playlists to play it.

3. To stop the music, tap the Pause ⏸ icon.

4. When you playing the music you can tap ↩ or return to the previous screen.

Click ▶ switch to the currently playing interface, It is shown as follows:

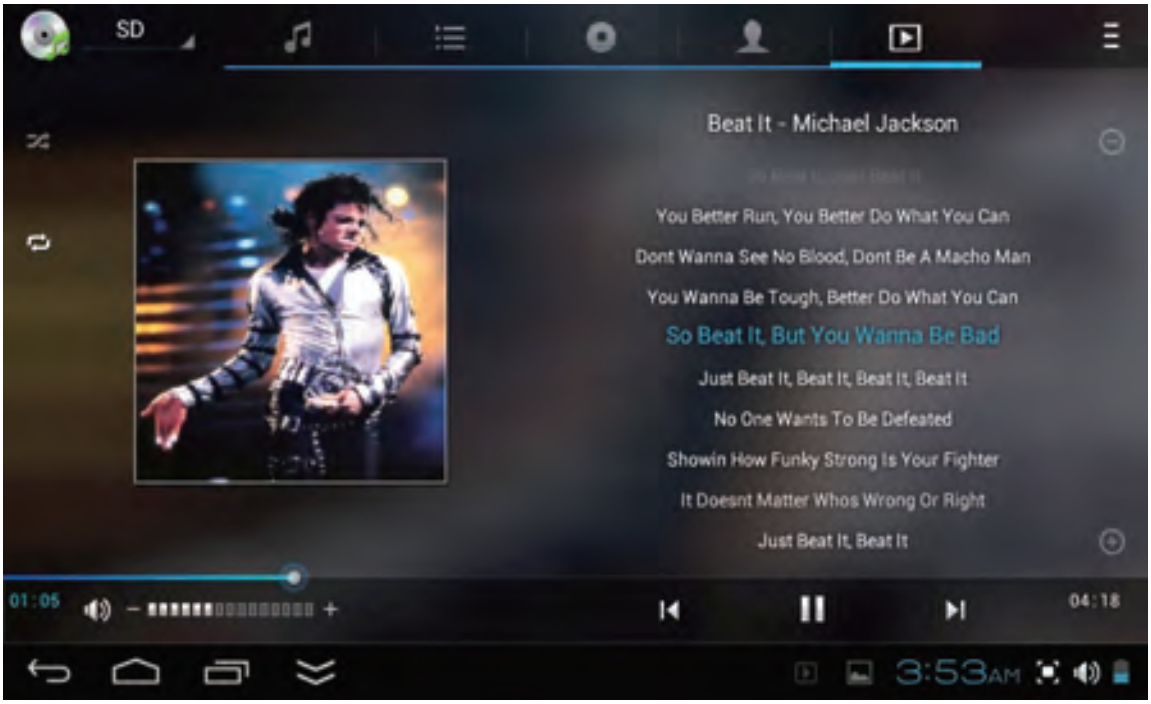

Beat It - Michael Jackson

You Better Run, You Better Do What You Can
Dont Wanna See No Blood, Dont Be A Macho Man
You Wanna Be Tough, Better Do What You Can
So Beat It, But You Wanna Be Bad
Just Beat It, Beat It, Beat It, Beat It
No One Wants To Be Defeated
Showin How Funky Strong Is Your Fighter
It Doesnt Matter Whos Wrong Or Right
Just Beat It, Beat It

At this interface, you can do: view /download the lyrics, display album photo or spectrum, play / pause, switch to the previous / next, loop and random operation etc.

Create Music Widget

Through the Music Widget can be quickly play the music.

On the desktop tap + icon, In the pop-up list select **Widgets** → Select **Music Widget.**

The Operation with Music and Playlist

Add playlist

1. Enter ☰ Play list interface → click ⊕ .
2. Input the playlist name.
3. Tap Save.

Rename or Delete playlist

Switch to **display mode**, Tap the playlist → tap [I] → Enter a new name in the dialog box, and click **Save**. If you want delete the playlist, click 🗑 →click save.

Add music

1. In the **all song, album**, and **artist** list, Tap the music and hold for switch to multi-select mode.
2. Select the music which you want to add to the list (if you don’t want to add, tap it again to cancel).
3. Tap **Add to playlist**, and then select a playlist.

Delete music

Tap and hold on the music you want to delete → tap **Delete.**

Sort by title or date added

In the all song interface, on the upper right click the ☰, in the pop-up list select **sort by title**, and then click the alphabetical of the right hand, the interface will quickly jump to the songs match the first letter (including the first letter of the pinyin)in the alphabetical list. If you select Sort by date added, all songs will sorted by add date.

24.My Video

☆ *Video file formats supported: MPEG1/2/4、H263、H264 VC1、RealVideo、MotionJPEG. The largest video format is supported 1080P(1920×1080) resolution.*

Play Video

1. Tap the **My Video** application icon.
2. Select the video from ROM, SD card or USB.
3. Tap screen and click the related icon adjust the video, (including volume, pause/play, brightness, track, subtitle, and display scale).

4 Tap **Back button** or to return to the **My Video** screen.

Create Video Widget

Through the Video Widget can be quickly play the video.

On the desktop tap icon, In the pop-up list select **Widgets** → Select **Video Widget.**

The Operation with Video

Setting video display mode

Tap icon, the video screen can be switched within full screen, actual size, best fit three modes.

Audio track and subtitle switching

In the video player interface, in the top right click icon switch audio track and subtitle.

The Operation with Playlist

Classification of video list

In the root directory, on the top left click the album (times) classify the video.

Switch display mode in the classification folder

In the classification folder, click and icon switch to list display mode or album display mode.

☆ *In the classification folder, users can click classify the video by time or name.*

Send or delete the video in the list

Tap and hold the video, → on the top right of the screen , click the option or delete button to send or delete the video.

25.My Photo

☆ *Photo file formats support: JPG, JPEG, BMP, and PNG.*

1. Tap the **My Photo** application icon.
2. Tap on the desired photo, to view individual photo.

3. On the top right screen click ☰ to operate the corresponding photos.(including zoom in/zoom out, share, rotate, trim, photos set to, adjust the current display scale, show details)

The operation with picture list

Classification of photo list

In the root directory, on the top left click the album (times, Locations, people, or tags) classify the photo,

Delete the photo in the list

Tap and hold the video → on the top right of the screen , click the delete button to delete the photo.

Slide show and settings

Enter the slide's setting

1. Tap the **My Photo** application icon.

2. In the root directory, on the top right click the ☰ → setting.
3. In the settings interface, set the Filter photo by file size, slideshow speed, and slideshow mode.

Slide show

1. Tap the 🖼 **My Photo** application icon. Click the photo folder.
2. click ≡ →slide show.

☆ *In the classification folder, users can click* ≡ *and classify the photo by time, color or name.*

Doodle

☆ *In **My Photo** you can do doodle.*

1. Open the picture.
2. Click the ✎ icon → Select **My Photo**.
3. In the doodle interface, user can choose the different doodle function, such as brush, shadow, FX, board, or crop.（**Note**：It will missing brush function if you choose the **Gallery**）
4. After finish the doodle, click the **save** icon.
5. Click the 🖼 icon return to picture browsing interface.

Create Photo Widget

Through the Photo Plug-ins can be quickly open the photos.

on the desktop tap + , In the pop-up list select Widgets →Select Photo Widget.

26.Gallery

The operation with photo and video list

Classification of photos and videos list

In the root directory, on the top left click the album (times, Locations, people, or tags) classify the photos and videos.

View, play the photos and videos

Photo: In the classification folder, click on the photo thumbnails to open the photo,and on the top right of the folder interface tap ▶ icon to playing slide.

Video: In the classification folder, click on the video preview, enter to the video preview interface, and click the play button in the video preview to play the video.

Delete the photos and videos in the list

On the top right of the screen, Tap ⋮ icon →Tap **select album** or **Select item**, And then select the photo or video which you want to delete, tap 🗑 → **Delete**.

☆ *Gallery only supports the display and manages photos and videos in the default reading/writing storage. To toggle the display of the storage area, go to Settings →storage →default reading/writing storage to make changes. The device default storage area is Local disk.*

27.Screen Capture

You can capture a screen image by tapping ⛶ at any time.

Tap the Screen Capture application icon to set options for a screen capture.

- **Select a delay timer to capture the screen (seconds).**
- **Select the default storage device.**
- **Show screen capture icon in status bar.**

After the images are saved, they can be viewed through My Photo application.

28.Task Manager

Use PK Manager to manager applications and widgets.

Stopping Applications

Android does not automatically stop applications after they are loaded, so you can manually stop the applications as desired.

1. Tap the **Task Manager** Application icon.
2. Tap **Running** to display all running applications.
3. Tap on an application you want to stop → tap **Force stop** →OK.

Uninstall Applications

1. Tap the **Task Manager** Application icon.
2. Tap **All** to display all applications.
3. Tap on an application you want to uninstall → tap **Uninstall.**
4. Tap **OK** to confirm uninstall.

Install Applications

1. Tap the **Task Manager** Application icon.
2. Tap **Install** to display all applications and folders.
3. Find and tap on an application you want to install → tap **Install.**

29.Wifi

Tap Settings → Wi-Fi, enter into Wi-Fi settings.

1. Slide the Wi-Fi switch to turn on Wi-Fi.
2. All the AP in the vicinity will be listed, click to select the name you want to connect to AP;
3. If the AP is connected successful before, the AP information will be saved in the pop-up window, select "Connect" starts to connect, choose "forget" to remove AP information;

4. If the AP is not encrypted, in the pop-up window, select "Connect" Start Connection;
5. If the AP is encrypted, enter the password in the pop-up window, and click "Connect" Start Connection;
6. When internet connections are successful, the wireless connection icon in the bottom status bar appears.

30.Pppoe Settings

Before using this feature, Insert the USB network card into the device.

1. Tap Settings → PPPoE settings .
2. Input name and password then click connect to access the broadband network.

31.Ethernet

Before using this feature, Insert the USB network card into the device.

When the USB network cable plugged into the USB network card, you will see the bottom of status bar ETH symbol ETH ↑↓ appears

1. Tap Settings → Ethernet.
2. The device can automatically obtain IP address to connect to the network. You can also choose to manually set the IP address to get connected.

32.Settings

Wireless & networks	**Wi-Fi**	Turn on /off Wi-Fi, Set up & manage wireless access points.	
	Ethernet	**DHCP**	Automatic assign IP address
		Use Static IP	Manual assign IP address
	PPPoE settings	Set up ADSL network	
	Data usage	View of data usage	
	More…	**Airplane mode**	Disable all wireless connections.
		VPN	Add Virtual Private Networks (VPNs).
		Portable hotpot	
Device	**Sound**	**Volumes**	To adjust the Media volume.
		Default notification	Select desired ringtone sound.
		Vibrator	Turn on/off vibrator
		Touch sounds, screen lock sound	Turn on/off operate sounds.

Device	**Display**	**Brightness**	Adjust the screen brightness as desired.
		TV screen adjustment	
		Wallpaper	Set up wallpaper
		Allow hiding the status bar	Allow hiding the status bar
		Show full-screen gesture tip	Full-screen gesture prompts
		Sleep	Adjust the delay before the screen automatically turns off.
		Font size	Set the system font size
	Storage		View, uninstall, and format the internal memory, SD card and USB storage.
	Battery		View the usage of the battery.
	Apps		View and uninstall applications
Personal	**Account & sync**		Add sync account.
	Quick launch		Setting program

			launch shortcuts.
	Location services	**Google's location service**	Let apps use data from source such as Wi-Fi and mobile network to determine your approximate location
		Location & Google search	Let Google use your location to improve search results and other service.
	Security	**Screen lock**	
		Owner info	
		Encrypt tablet	Require a numeric PIN or password to decrypt your tablet each time you power it on.
		Make passwords visible	
		Device administrators	View or deactivate device administrators
		Unknown sources	Allow installation of non-Market apps.
		Trusted credentials	Display trusted CA certificates.
		Install from SD card	Install certificates from SD card.
		Clear credentials	Remove all certificates.

	Language & input	**Language**	Setting system language.
			Spelling correction, personal dictionary, keyboard and input methods, physical keyboard, speech,mouse /trackpad.
	Backup & Reset	**Back up my data**	Back up app data, Wi-Fi passwords, and other settings to google servers.
		Automatic restore	When reinstalling an app, restore backed up settings and data.
		Factory data reset	Erases all data on tablet.
System	**Date & Time**	**Automatic date & time**	Use network-provided time
		Set date	Set date
		Set time	Set time
		Select time zone	Select time zone
		Use 24-hour format	Choose 24-hour format or 12-hour format.
		Select date format	Select date format.

System	**Accessibility**		Large text, power button ends call, auto-rotate screen, speak passwords, touch & hold delay, and install web scripts
	Developer options		USB debugging, development device ID, stay awake, allow mock locations, desktop backup password, strict mode enabled, pointer location, show touches, show screen updates, show CPU usage, Force GPU rendering, window animation scale, transition animation scale,
	About tablet		System updates, Status, legal information, model number, android version, kernel version and build number.

4. If the AP is not encrypted, in the pop-up window, select "Connect" Start Connection;
5. If the AP is encrypted, enter the password in the pop-up window, and click "Connect" Start Connection;
6. When internet connections are successful, the wireless connection icon in the bottom status bar appears.

Frequently Asked Questions

Android

Q: What Android OS version is on my Device?

A: 4.0.3

Basic Device Functionary

Q: Do I have to charge the battery before use?

A: You should charge the battery for at least 6 hours in the off status, but you can use the device while it’s charging.

Email

Q: Can I use any of my personal email addresses to send/receive email?

A: The device supports POP3 and SMTP accounts. Some free email accounts are not supported on mobile devices. Check with your email provider to see if you account is supported..

Media Cards

Q: Which media cards are compatible with my Device?

A: SD cards.

Music

Q: What type of music files can I play on my device?

A: MP2, MP3, WAV, AAC, WMA

Q: How do I add music files to my device?

A: Copy the music files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Photos

Q: What type of photo files can I view on my device?

A: JPG, JPEG, BMP and PNG.

Q: How do I add photo files to my device?

A: Copy the photo files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Video

Q: What type of video files can I play on my device?

A: Video file formats supported: MPEG1/2/4、H263、H264、VC1、RealVideo、Motion JPEG. The largest video format is supported 1080P(1920×1080) resolution.

Q: How do I add video files to my device?

A: Copy the video files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Wi-Fi

Q: Do I need a Wi-Fi adapter to connect to the Internet?

A: No. The Wi-Fi adapter is built-in to the device.

Battery Management

The battery is not fully charged out of the box, so it is recommended that you charge the battery for at least 6 hours before you start to use the device.
The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery’s lifetime by following the suggestions below:

- Use your Tablet at least once a week.
- Charge the battery regularly and fully.
- Never leave the battery fully discharged for a long period of time.
- Always keep the device and the battery away from heat.

Charge battery

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours in the off status).

☆ *You cannot charge the battery using the USB cable.*

When fully charged, the battery icon displays as 🔋 .

A fully discharged battery takes approximately 6 hours to fully charge in the off status, but you can use the device while plugged in when desired.

Important Safety Precautions

Always follow these basic safety precautions when using your Tablet. This reduces the risk of fire, electric shock, and injury.

- Do not expose this product to rain or moisture.
- Keep the device out of direct sunlight and heat sources.
- Protect the power cord. Route power cords so that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the device.
- Only use the AC adapter included with the device. Using any other power adapter voids your warranty.
- Do not remove the cover. There are no user-serviceable parts inside.

Cleaning your device

Treat the screen gently. To clean fingerprints or dust from the screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth.

Appendix：List of the default key function

Button	Function	Button	Function
F1	Browser	F2	My Music
F3	My Video	F4	My Photo
F5	Calculator	F6	Weather
F7	Brightness+	F8	Brightness-
F9	Calendar	F10	File Browser
Fn+←（Home）	Back to Home	Fn+→（End）	Sleep
Delete & ⌧	Delete & Back space	Ctrl+Alt+Del	Reboot
Num Lock	Number keyboard	Caps Lock	Caps Lock
Esc	Back	Tab key	Tab
Arrow Key（↑ ↓ ← →）	Up/Down/Left/Right	Shift key	Shift
Pause Break	Play、Pause（Music and Video）	PrtSc SysRq	Print screen
ZZZ	Sleep	☰	Menu
PrtSc SysRq	printscreen		

Note: The above list is for reference only, please prevail in kind.

Because android system has some differences with other systems, the scroll lock, Page Up, Page Down and Insert, etc. buttons had no effect, Please note that during use!

Specifications:

Display	7" TFT LCD 800x480
CPU	400MHZ
Memory Capacity	1GB DDR3
Built-in Memory	4GB NAND Flash
Operation System	Android 4.0
WIFI	Built-in Wi-Fi (802.11b/g)
LAN	Built-in 10/100M LAN
Keyboard	80 Keys Keyboard
Mouse & Touch Pad	Support USB Mouse & Built-in Touch Pad
USB Port	2×USB Port
camera	0.3MP
HDMI	Support 1080P
Card Port	SD card reader
Sound Effect	Audio build-in 2 Stereo Speaker
	External Microphone, 3.5mm Earphone
Applications	King Kong Apps Market, Internet Browser, Office, Calendar, Calculator, E-mail, Instant Message
Entertainment	Picture Viewing, Music / Video Playback, Games
Battery	5V / 2800MAH
Power	110-240V Input, 5V DC Output, 2 A

Basic Warranty Statement

This product is warranted to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety **(90) DAYS** (parts and labor) and **one (1) YEAR** (parts only) from the date of original purchase. We agree under the warranty period to replace product if it is determined to be defective at “No Charge”. This limited warranty does not cover any loss or damages that occur as result of:

- Cosmetic damage.
- Shipping or improper installation or maintenance.
- Misuse.
- Neglect.
- Any cause other than ordinary commercial or industrial application.
- Adjustment by non-authorized source or any of the products firmware or hardware that you or any third party have modified or altered
- Improper enviornment
- Excessive or inadequate heating or air conditioning or electrical power failures, surges, connection to improper voltage supply or settings or other irregularities.
- Accidents, acts of God.

In the United States and Canada contact Customer Service at (909) 627 - 9888.

*** Please note that in order to have your merchandise repaired and replaced by warranty, you must contact our customer service representatives by phone or email, and get RMA number**

To obtain factory service, the original purchaser MUST present the following:

1. A sales receipt/proof of purchase indicating date of purchase

2. Your Name, Place of Purchase, Address, UnitModel,and Description of Problem.

3. Send the unit pre-paid to the address below in the original packaging or reasonable substitute to prevent damage. **No return will be shipped back to a PO BOX.**

4. All of the accessories that came with the product package must be sent along with the main unit.

5. Please include your check or money order in the amount of **$20.00** to cover handling and return shipping charges. We will not be responsible for delays or unprocessed claims resulting from purchaser’s failure to provide any or all of the necessary information.

6. There is Additional Shipping Charge for areas outside of United States. For shipping charge please consult with our customer service.

Please review your user guide carefully before using this product.

If you need further assistance
please contact us at:

(909) 627 - 9888

Additional troubleshooting information
can also be found on the web at:

www.iviewus.com and click on "Support"
or email us at support@iviewus.com